


TRACING WIRE INSTALLATION DETAIL

NOT TO SCALE

NOTES:

1. OPEN CUT INSTALLATIONS WILL REQUIRE 12 GAUGE PVC COATED COPPER WIRE.
2. TRENCHLESS INSTALLATIONS WILL REQUIRE FOUR #14 WIRES BEING INSTALLED WITH THE PIPE AND CONNECTED TO THE TRACER WIRE AT BOTH ENDS, OR CAD WELDED TO THE EXISTING IRON PIPE AT BOTH ENDS.
3. CONTRACTOR SHALL INSTALL DUMMY VALVE BOXES AT INTERVALS NO GREATER THAN 500 FEET, INCLUDING ONE AT THE DISCHARGE POINT.
4. THE WIRE AND TAPE SHALL MEET BCWS STANDARDS.
5. TRACER WIRE SHALL BE GREEN IN COLOR FOR FORCE MAIN.

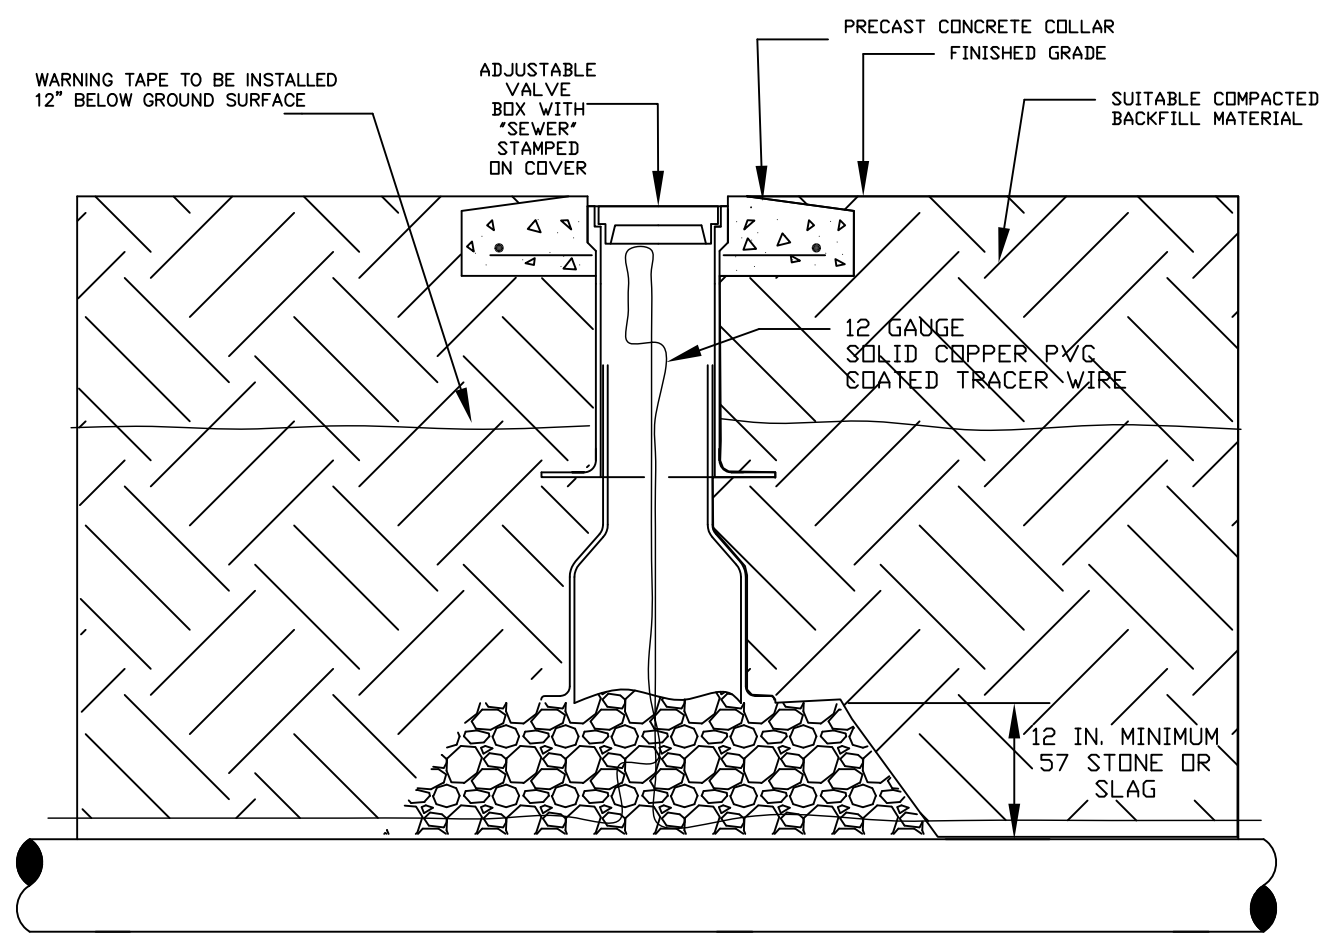

DUMMY VALVE BOX DETAIL

NOT TO SCALE

SEWER PANEL 6

BERKELEY COUNTY WATER AND SANITATION
POTABLE WATER & SANITARY SEWER STANDARDS

Rev. 05/23/11