


1. CENTER VALVE BOX OVER OPERATING NUT TO INSURE FREE VALVE OPERATION.
2. USE TELESCOPING VALVE BOX ON ALL VALVES.
3. SUPPORT VALVE BOX BOTTOM ON WELL COMPACTED BACKFILL. DO NOT ALLOW VALVE BOX TO REST ON ANY PORTION OF VALVE.

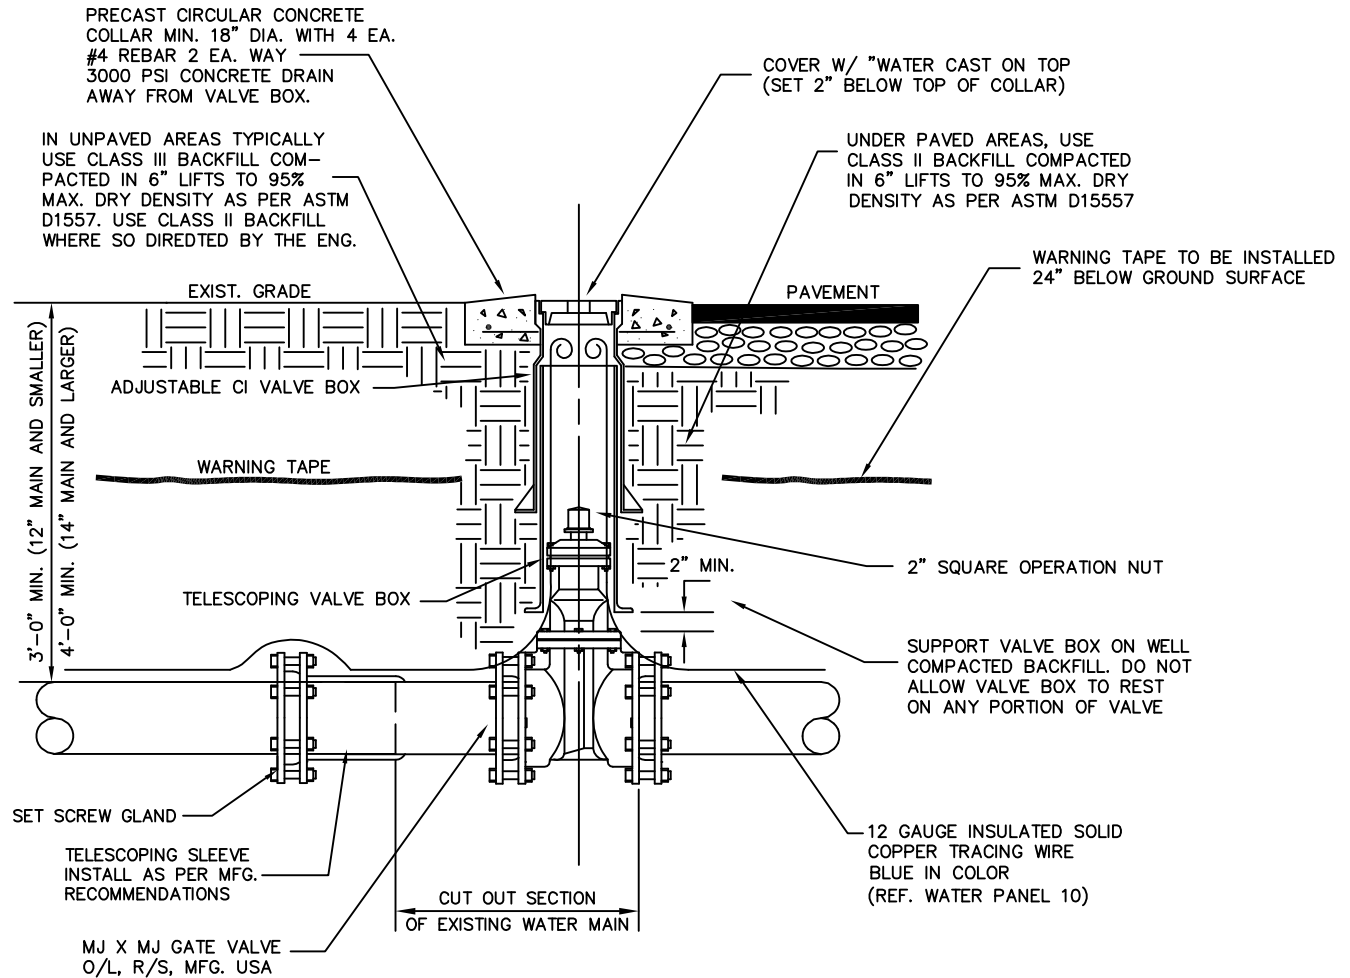

## CUTTING-IN SLEEVE AND VALVE INSTALLATION

NOT TO SCALE

### WATER PANEL 7